

Dual-purpose pedal: buffer and boost.

The **buffer** offers optimum transparency and will solve any problems of loss of signal caused by long effect chains. It can help you produce those harmonics you thought you had lost and which your audience will think highly of. The clear **boost** will give you the boost you need for your solo parts and is also useful for saturating your amplifier channels. With close attention to the musician's needs and requirements, we have chosen a specific range of frequency responses for this product, from **medium-low** to **medium-high** frequencies. You can choose from the "Tone" control: the 12-hour position corresponds to "Flat" frequency.



# POWER jack 9 - 12 V DC 20 mA center negative

### **input** jack

#### Tone

controls tone, right for medium-high frequencies, left for medium-low frequencies

## Volume controls boost level



### buffer

engages or disengages the buffer when the boost is off

### boost

engages or disengages the boost

To replace the **battery**:

- 1. loosen the screws at the base
- 2. remove the base of the pedal
- 3. replace the battery
- 4. close the pedal with the screws

### Settings





flat boost



medium-low fq. boost





medium-high fq. boost





boost for lead channel





treble boost



buffer only